

# Event Tent 5'

 
 
Canopy





# Event Tent 15'

## Canopy

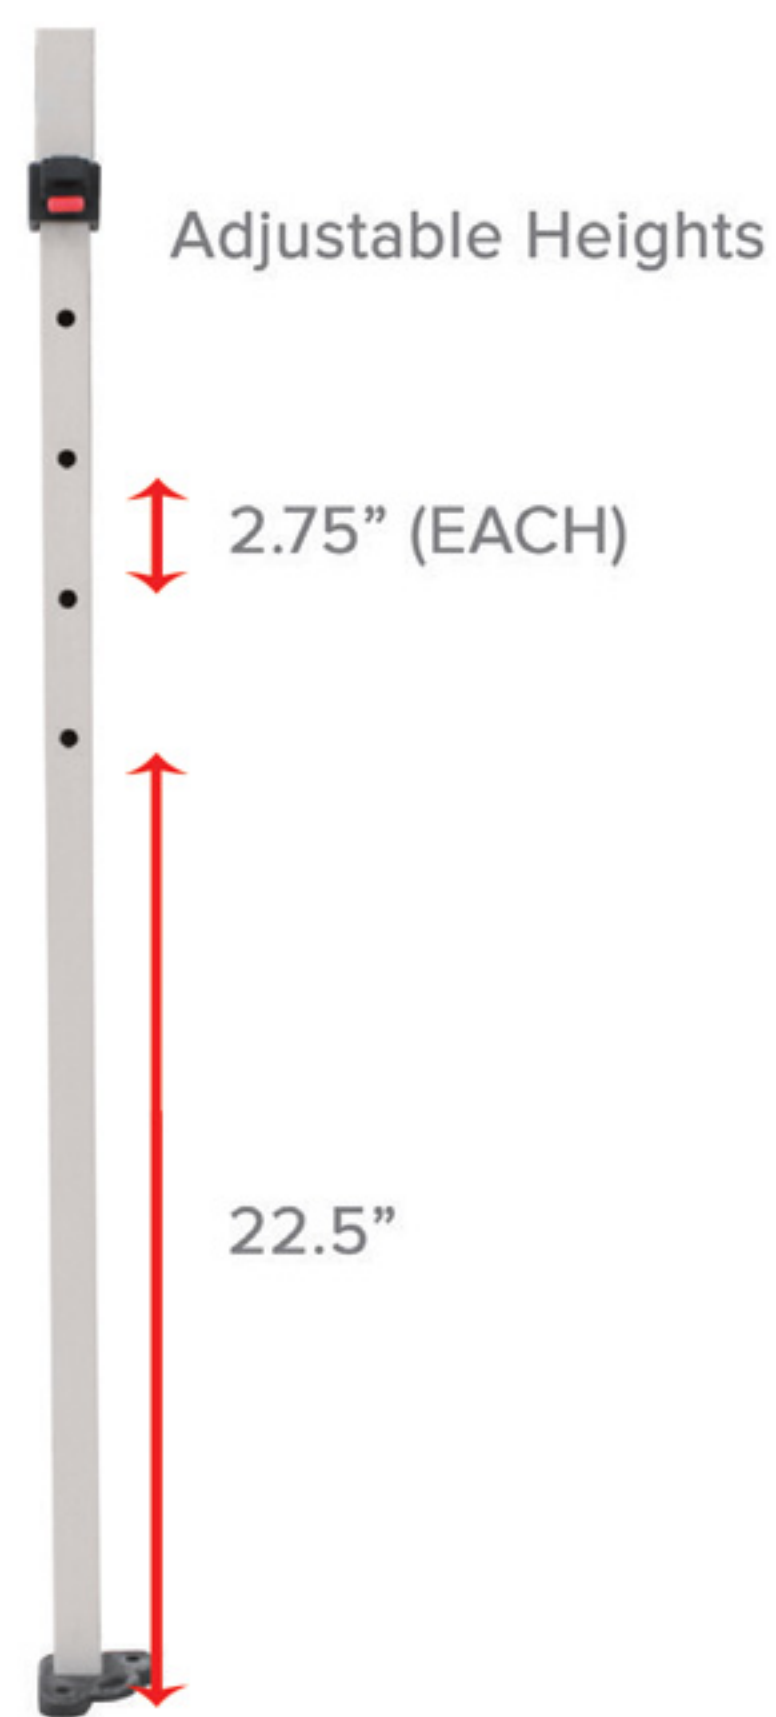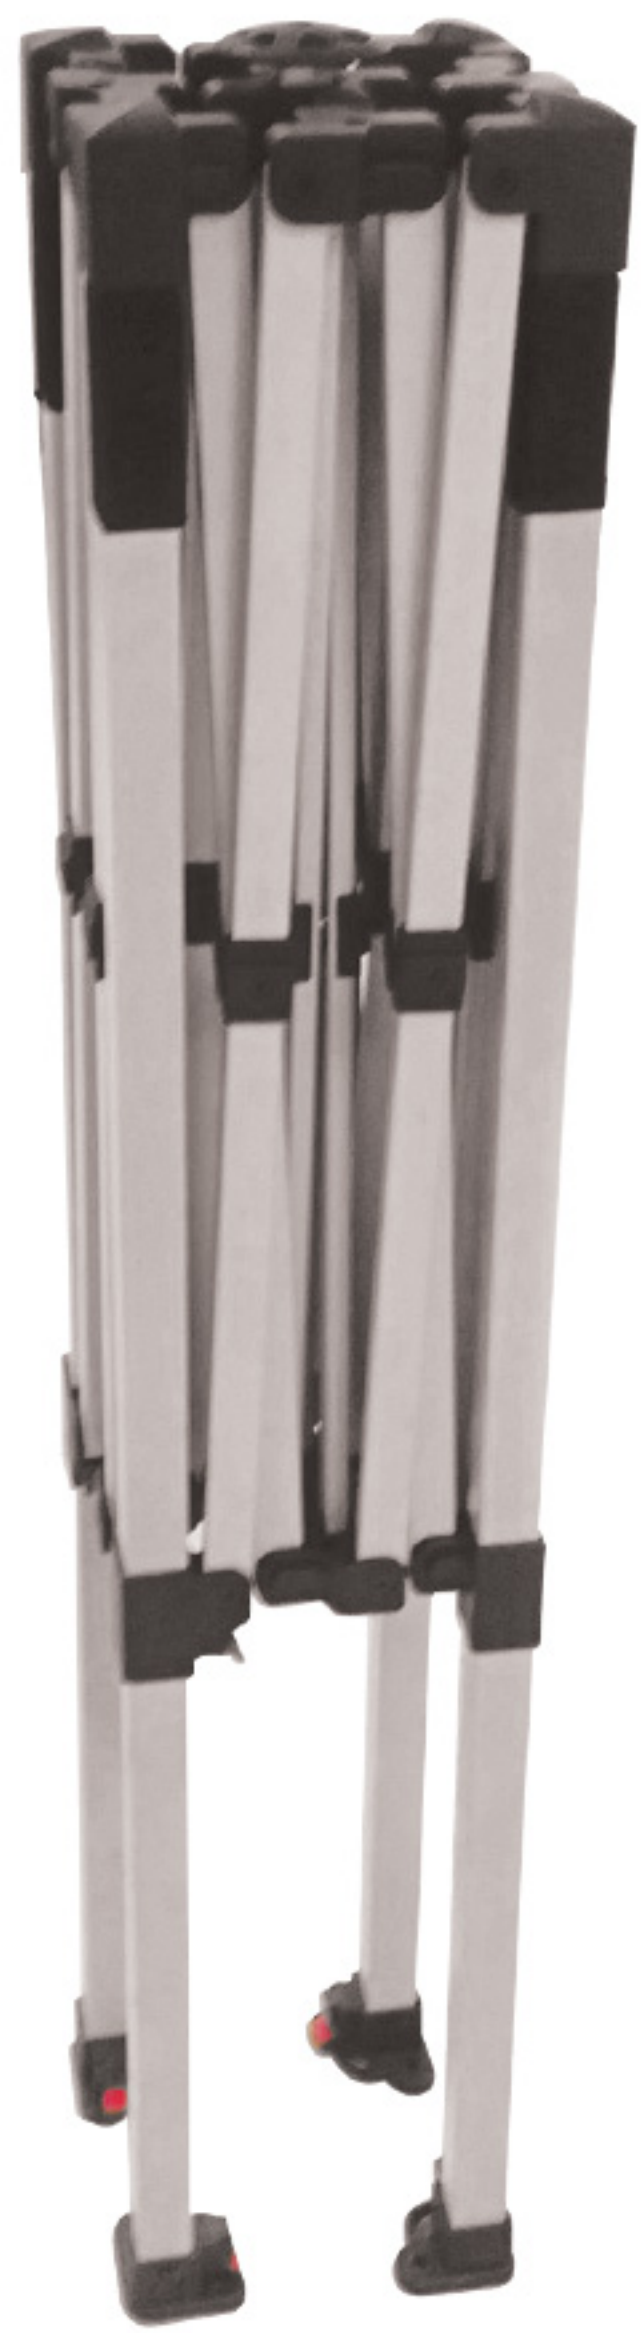

Rope & Stakes w/Bag



Optional Water Base



Crank for peak adjustment



Optional Flag Mount



Optional Sand Bag



Standard Travel Bag



Optional Bag With Wheels



Optional La Caja Hardcase

DISPLAY DIMENSIONS	59.75"W x 103.5"H x 59.75"D
MIN. HEIGHT	69"H
MAX. HEIGHT	103.5"H
LOWEST SETTING TO PEAK	90.75"H
FLOOR TO LOWEST SETTING	22.5"H
GRAPHIC DIMENSIONS	60.25"W x 49"H
<b>GRAPHIC MATERIAL</b>	
UV Fabric (water resistant)	
<b>GRAPHIC FINISHING</b>	
Hemmed around sides and bottom edges.	
<b>DISPLAY CONSTRUCTION</b>	
Aluminum frame (Hex leg thickness: 32mm)	
<b>SHIPPING WEIGHTS &amp; DIMENSIONS</b>	
Shipping Weight	39 lbs
Shipping Dimensions	50"L x 9"W x 19"H
<b>LARGE QUANTITY FREIGHT</b>	
Freight Shipping	28 boxes per 50"L x 40"W x 74"H skid
Freight Weight	1092 lbs (frame only) 1126 lbs (frame & graphic)
<b>GRAPHIC TURN AROUND TIME</b>	
4 business days after proof approval (up to 2 sets)	
<b>AVAILABLE ACCESSORIES</b>	
Rope	Sand Bag
Stakes	La Caja Hard Case
Flag Holder	Travel Bag Wheels
<b>AVAILABILITY</b>	CA Only
<b>WIND RATING</b>	20 mph



# Set up instructions

(5ft canopy shown below)




(qty 1) Canopy Frame



(qty 1) Rope



 (qty 1) Travel Bag

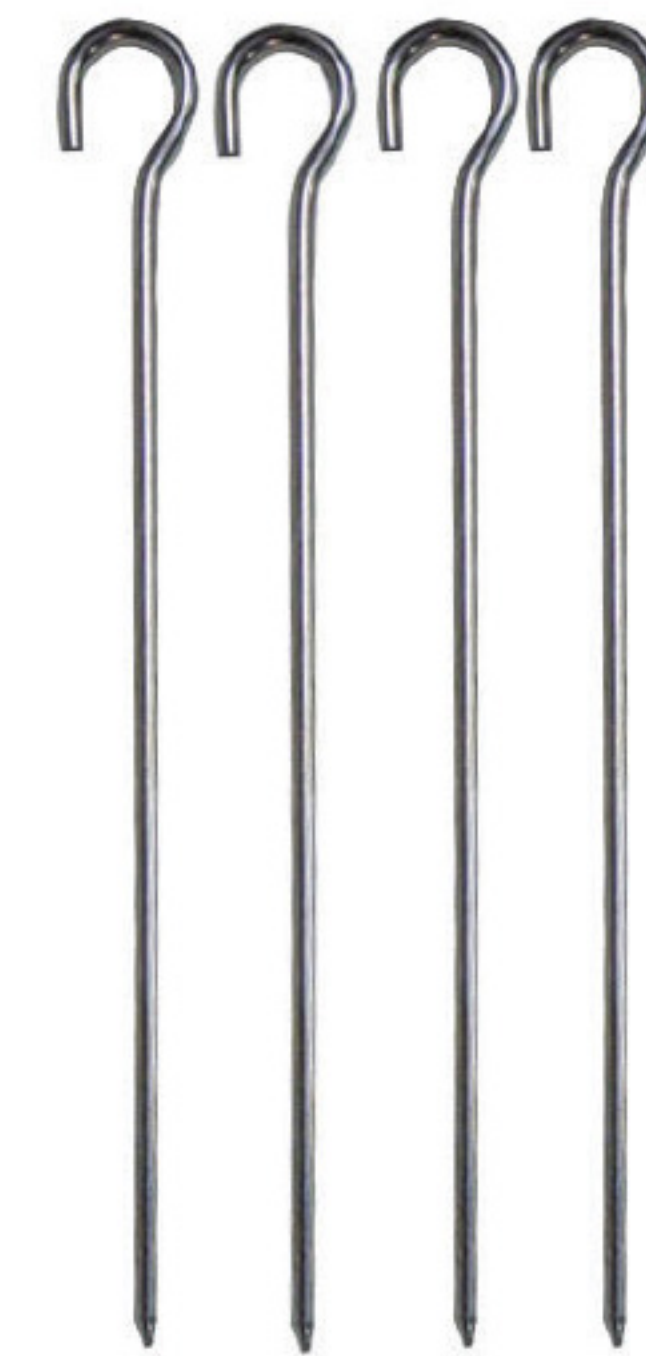

(qty 4) Stakes



(qty 1) Bag for Rope & Stakes



# Set up instructions

(5ft canopy shown below)

## Step 1

Take your frame and slightly expand it open to expose the corner bars.



## Step 2

Take your canopy graphic and place it on top of the frame.



 
## Step 3

Adhere each corner of the canopy to each corner of the frame. Inside each corner of the canopy, there is a strip of loop Velcro sewn to it and each corner of the frame has a strip of hook Velcro.



## Step 4

With the canopy securely in position, expand the frame until the corner latches lock into place.

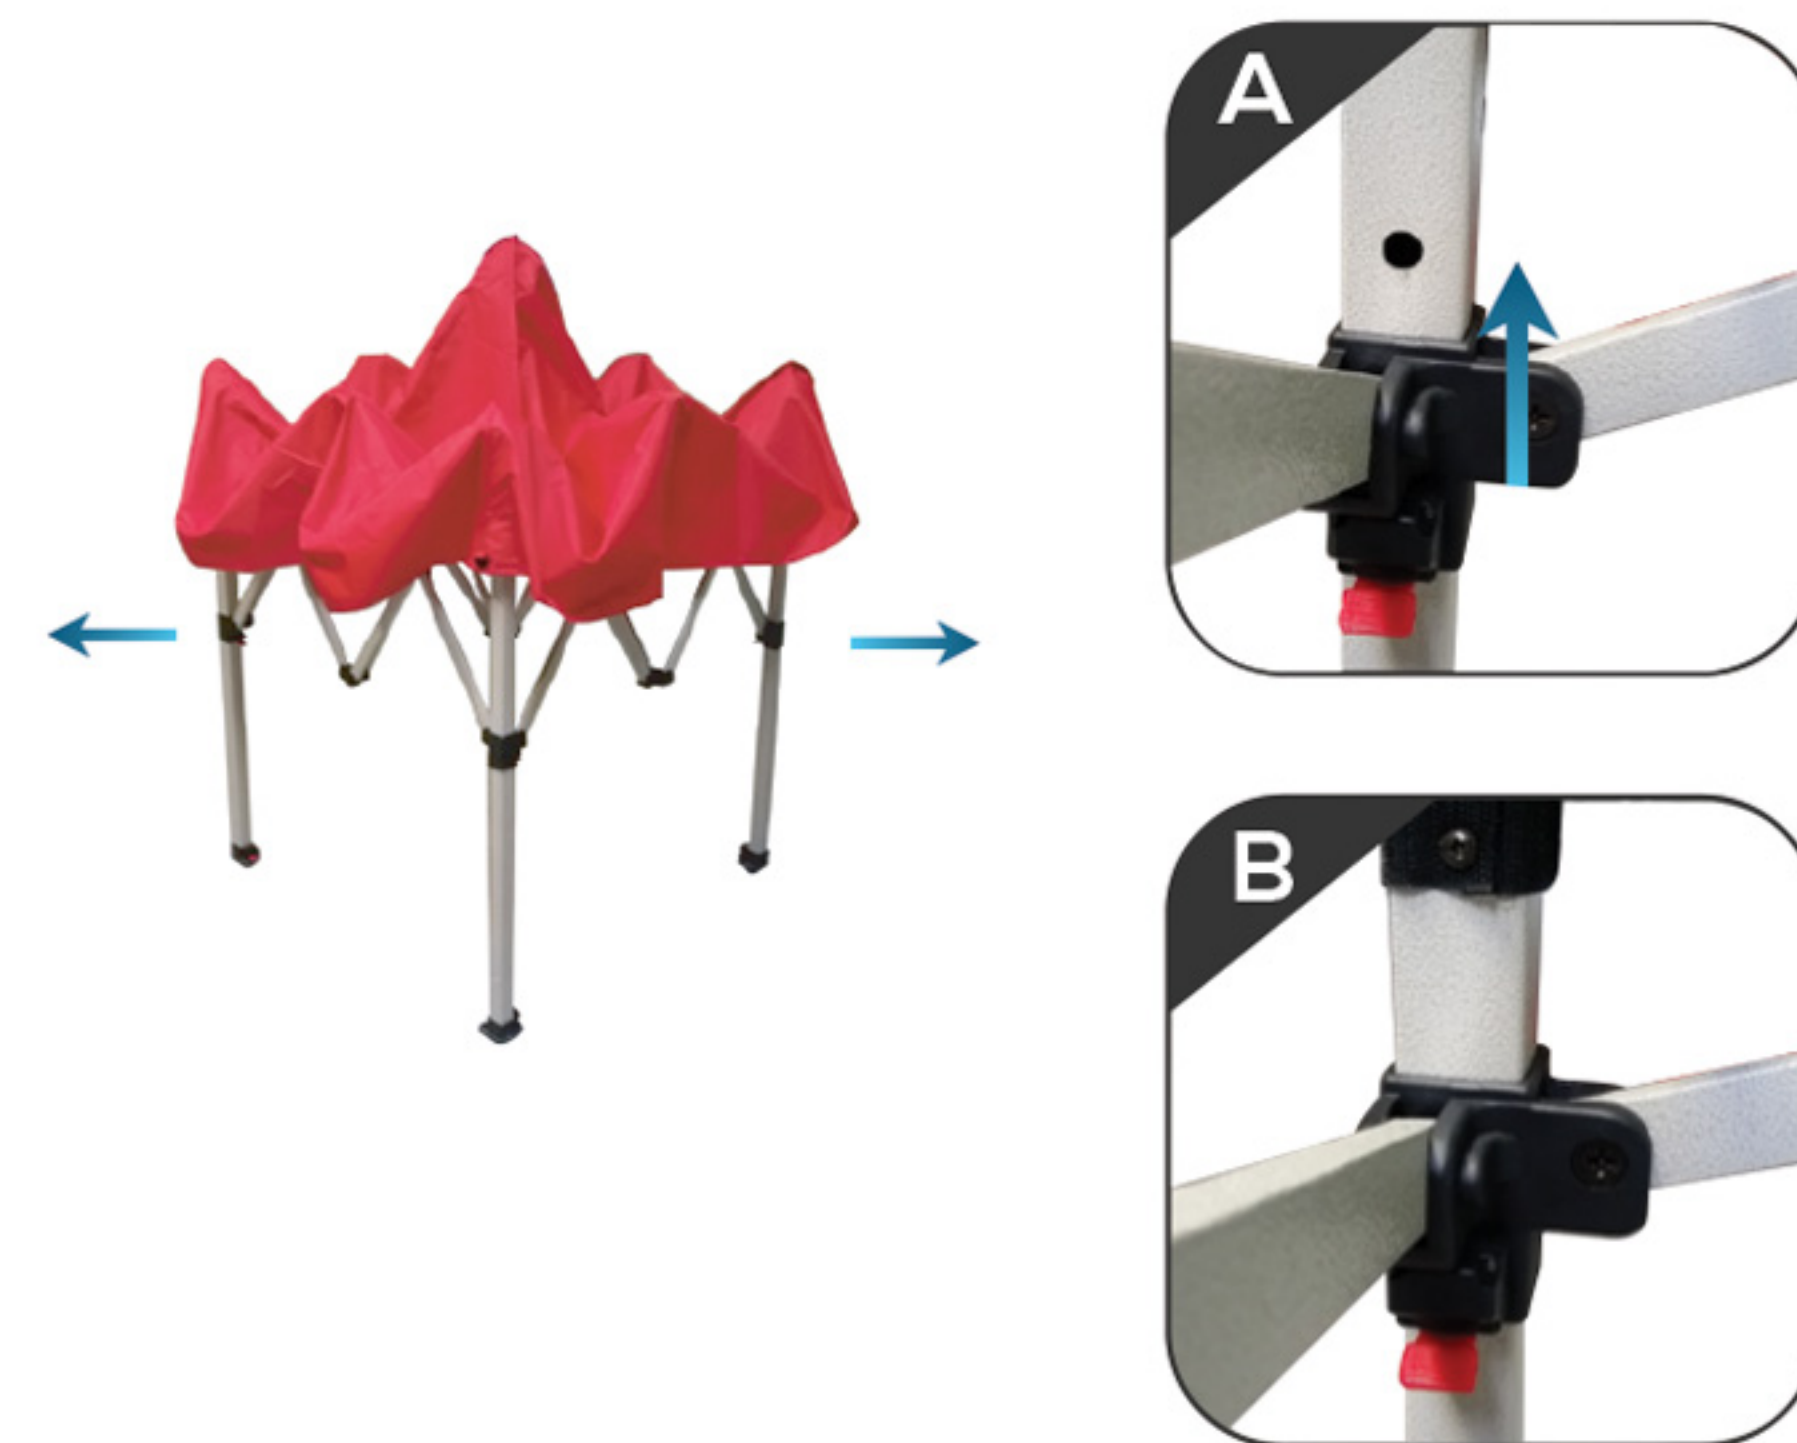

## Step 5

Increase the height by extending the lower legs.



## Step 6

Pull each leg down until the latch locks into place.



## Step 7

Locate the spindle under the canopy, in the middle of the frame. Pull the lever out and rotate to extend the upper peak pole. The dome cap will push out the canopy creating tension to flush out any loose areas.



## Step 8

The install is complete.

